



On TerraNova and RT/ST models the serial number is located on the inside of the extrusion below the motor rests.