


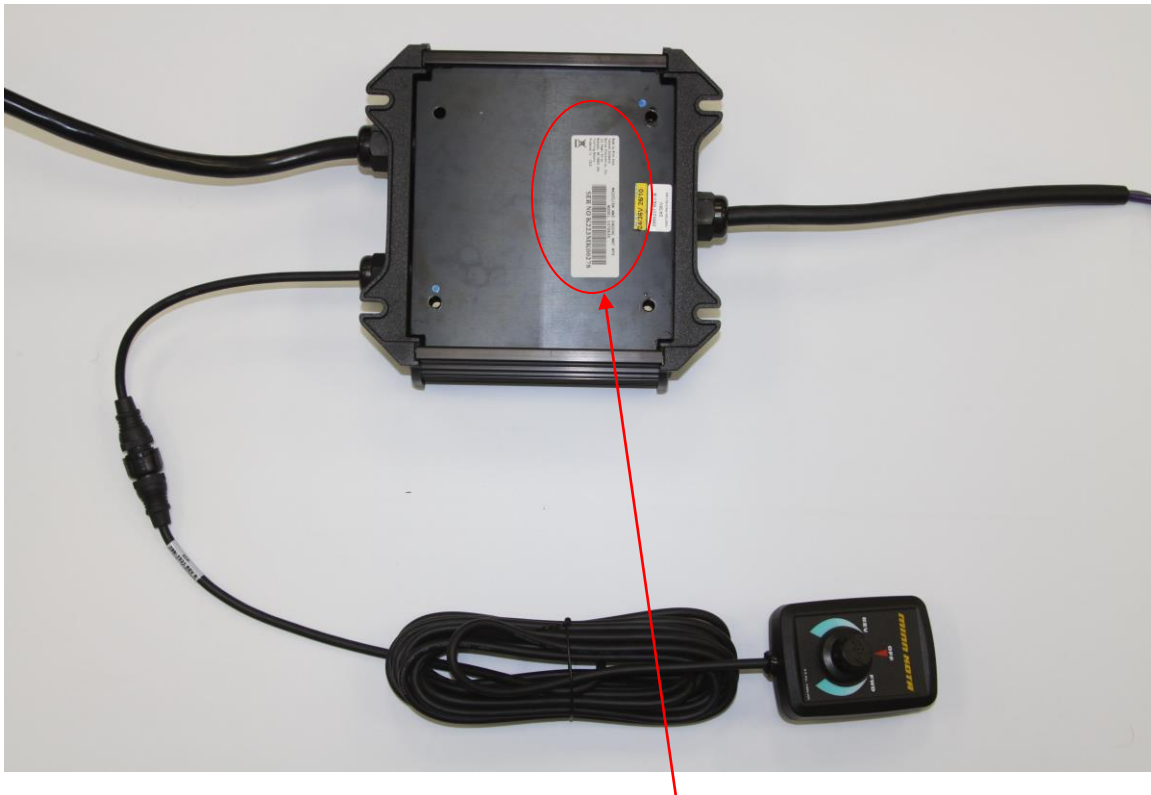

On the Engine Mount and RT/EM models the serial number is located on the bottom side of the control module.