



MKA-47 Quick Release Bracket Installation for a Terrova/PowerDrive V2

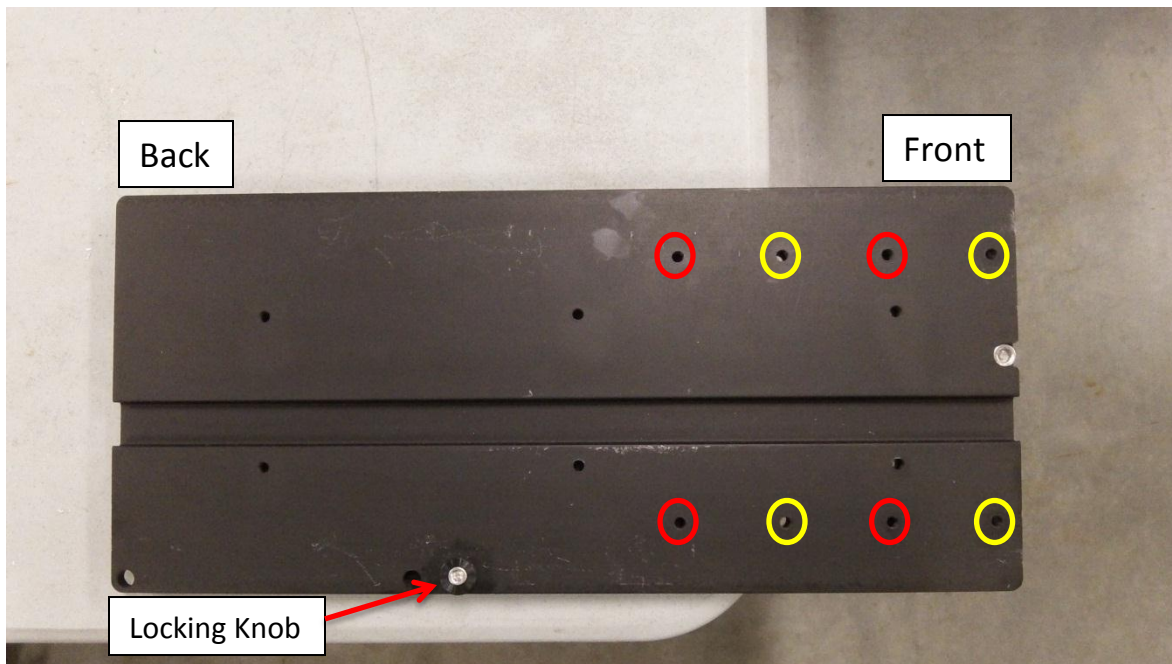

To mount the Terrova/PowerDrive V2 you will need to use *either* the 4 red holes or the 4 yellow holes on the MKA-47 quick release bracket.

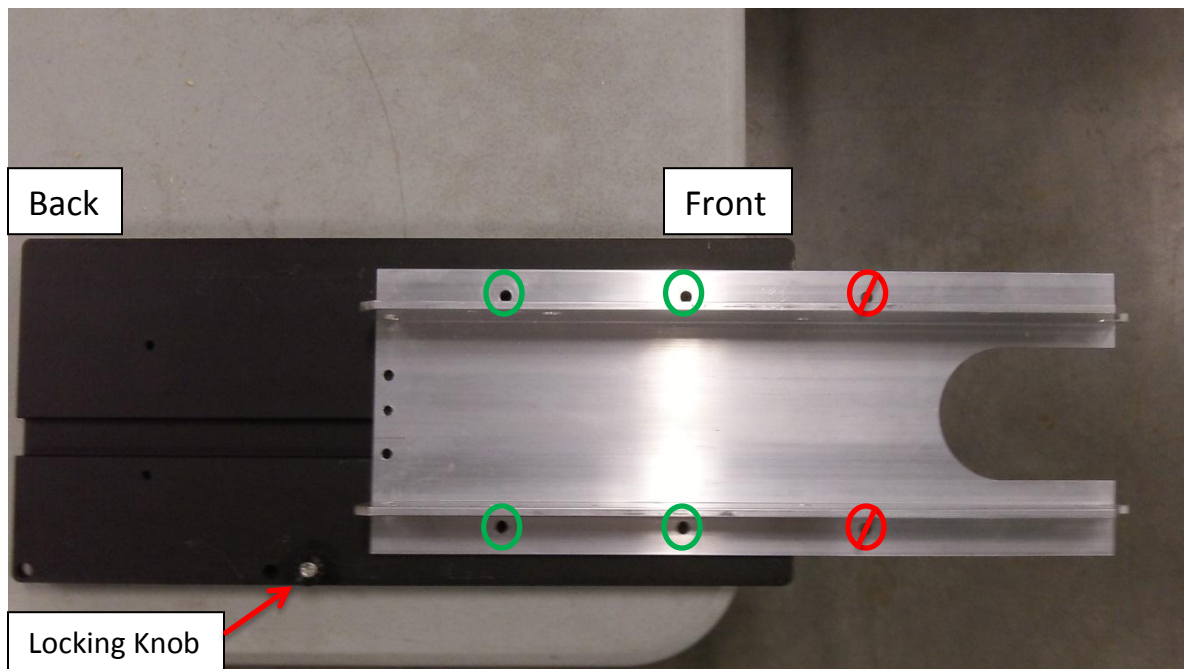

You will *only* use the 4 rear mounting holes (labeled in green) on the Terrova/PowerDrive V2 base. This will ensure that the shaft has proper clearance when the motor is deployed.